




**MOTOFONE**<sup>™</sup>  
F3

## Getting to Know Your Phone

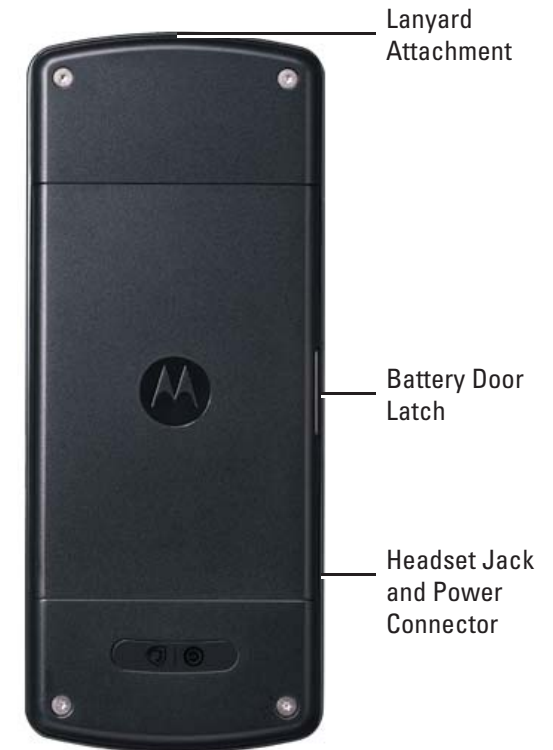

**Note:** This phone has voice prompts in local languages.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office.  
© Motorola, Inc. 2006

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this tutorial, are based on the latest available information and believed to be accurate at the time of publication. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

**Note:** Your phone may not appear exactly as the phone image above, however, all key locations, sequences, and functions remain the same.




MOTOFONE™ F3

## Voice Help

- 1** This phone has voice help in local languages.

The first time you start your phone, the phone asks you to select a language. Press the key that corresponds to your language.

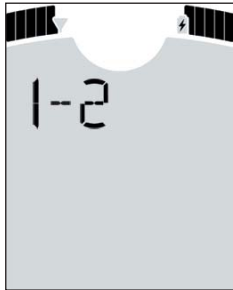


- 2** After you select a language, the phone asks you if you want voice help.

If you want voice help, press 1.

If you do not want voice help, press 2.

If you take no action voice help is activated.


If you selected voice help, a voice prompts you as you use your phone.

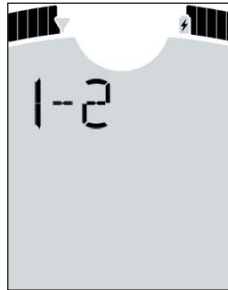

- 3** If you want to activate voice help later, enter

\*\*\*510\* and press .


If you want to deactivate voice help later,

enter \*\*\*511\* and press .




MOTOFONE™ F3


## Make, End, and Answer Calls

- 1 From the home screen, enter a number and press .


**Tips:**



To delete the last number, press .

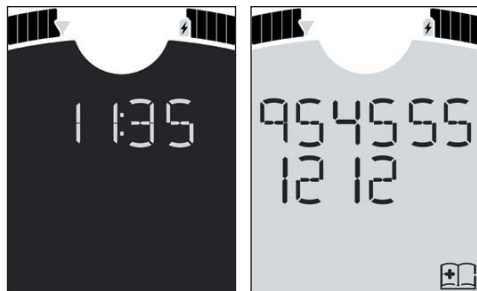To delete all numbers, press and hold .






- 2 To call a contact from your phonebook:

From the home screen, press .

Press  to select name, then press .

**Tip:** To find contacts quickly, press the first letter of the contact on your keypad.  
Example: For a contact starting with the


letter N, press  two times. Press  to select the exact name.

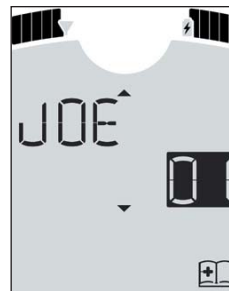



- 3 To call a phonebook contact using speed dial:  
For contacts 1-9, from the home screen press and hold the contact number for two seconds.


For the remaining contacts, from the home screen enter the contact number, press

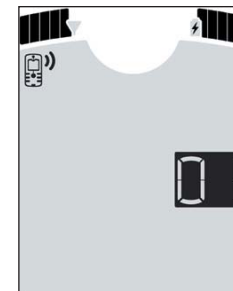, then press .



- 4 To end a call, press .

 indicates call in process.

 indicates call ended or failed.

- 5 To answer a call, press .




MOTOFONE<sup>™</sup><sub>F3</sub>

## Add or Delete Phonebook Contacts

### 1 To add a contact to your phonebook:

From the home screen, enter a number  
and press

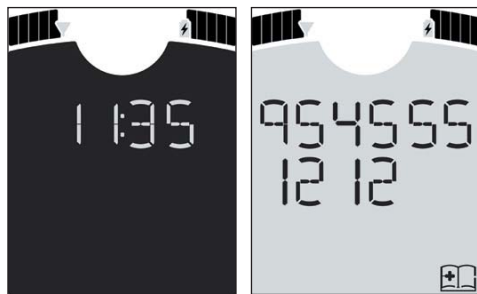


### 2 Enter the name of your contact and press




**Tip:** Press a key more than once to see more letters. For example, for the letter N, press

two times.

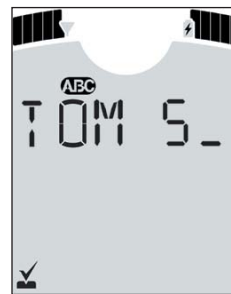

### 3 To delete a contact from your phonebook:


From the home screen, press and  
then press to select a name.  
Press two times to view ,  
then press .

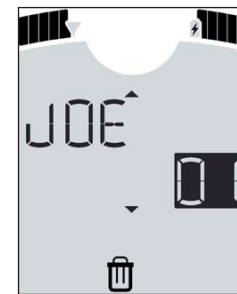






MOTOFONE™  
F3

## Send a Text Message

- 1 From the home screen, press .


Ensure  is selected in the menu,  
then press .




- 2 Enter your message and press .


**Tips:**


Press a key more than once to see more letters. For example, for the letter N, press


 two times.


To delete the last character, press   
To delete all characters, press and hold




To review all characters in your message,  
press .

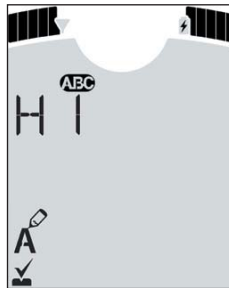

- 3 Enter a number or press  to select a name from your phonebook.

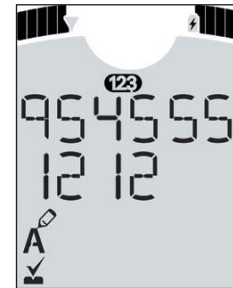

Press  to send the message.






MOTOFONE™  
F3

## Read a Text Message

- 1 From the home screen, press , then press  one time.





- 2 Ensure  is selected in the menu, then press .


Press  to read and scroll through the message.


**Tip:** To view a previous message,

press .

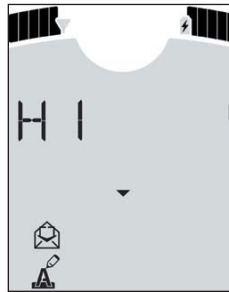

- 3 To reply to a text message, open the message, then press .

Enter your reply, then press .

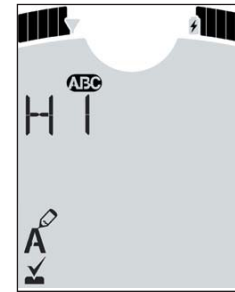

- 4 To delete a message, scroll to the end of the message (after the date and time) and press






**Note:** Text messages are automatically deleted (oldest to newest) when the SIM card is full.




MOTOFONE™ F3


## View Call History


- 1 From the home screen, press ,  
then press  two times.

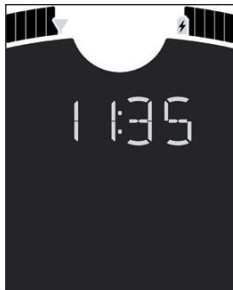


- 2 Ensure  is selected in the menu,  
then press .

Press  to scroll through the calls.

 indicates dialed calls.

 indicates received calls.

Press  to view time and date of the call.








MOTOFONE™  
F3





## Change Ring Tone and Ringer Volume
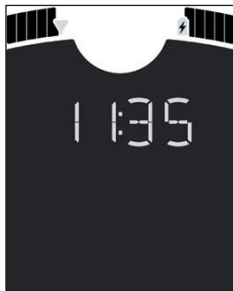
### 1 To change the ringtone:


From the home screen, press ,  
then press  three times.



### 2


Ensure  is selected in the menu,  
then press .  
Use  to select a ringtone,  
then press .


**Tip:** To hear the ringtone, scroll to the ringtone number and wait 3 seconds.

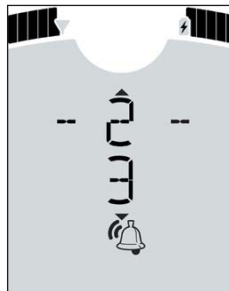

### 3

### To change ringer volume:

From the home screen, press .

**Tips:** To change your ringer to vibrate,  
press  repeatedly until the phone  
vibrates and  displays.

To change your ringer to silent, press   
repeatedly until  displays.














MOTOFONE™ F3

## Set Alarm

- 1 From the home screen, press , then press  four times.








- 2 Ensure  is selected in the menu, then press . Press the number keys to enter the alarm time, then press .  displays on your phone when the alarm is set.

**Tip:** The alarm remains set until you turn it off. To stop alarm ringing, press .



- 3 **To turn off the alarm:**

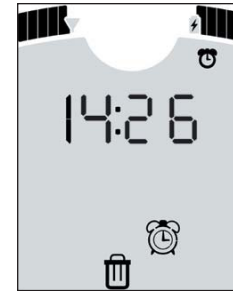

From the home screen, press , then press  four times. Ensure  is selected in the menu, then press  two times.








MOTOFONE™  
F3


## Set Date and Time

- 1 From the home screen, press ,  
then press  five times.



- 2 Ensure  is selected in the menu, then  
press .  
Press the number keys to enter the time,  
then press .



- 3 Press the number keys to enter the date,  
then press .





MOTOFONE™ F3


## Check Balance (optional)

1

### For some phones:

Your balance and expiration date display automatically:

- at power on
- at the end of an outgoing call
- at the end of an outgoing text message


To check your balance from the home screen press . Your balance and expiration date each display for 2 seconds before returning to the home screen.


**Note:** This feature may not be supported by your service provider. If not, proceed to step 2.

 
 


2

### For phones where step 1 does not apply:

Set the check balance key to . To do this, enter \*\*\*642\*, enter your balance inquiry

number, and then press .

Once the balance key is set to , press and hold  for 2 seconds to view your balance.

**Note:** This feature may not be supported by your service provider.

